

Safety | Features | Operation

- **Safety information**
- Standard features
- operating instructions

- **Safety information**

Move the conveyor: keep hands, clothing and other items clear of the rollers & conveyor ends.

Do not exceed the conveyor load capacity (stated at quotation or request from AED Rollers Ltd), as this may result in possible operator injury and/or damage to the conveyor.

Avoid wearing excessively loose clothing and keep long hair tied back when working with moving equipment

Broken or damaged parts must be replaced immediately

- **Standard features**

Gravity/Manual conveyors are constructed by AED Rollers Ltd / to customer specification/quotation

Load capacity per

kgF UDL

conveyor module. Individual Items not to exceed

**

* $\geq 75\%BB$

If supplied:

Stands all come with bolt to floor feet for additional security - recommended

Set conveyor Parallel or Decline*

- **Installation & operating instructions**

Remove packaging. If the conveyor was shipped in two or more sections they will need to be connected using the stand smiley bracket (see diagram)

If supplied. Fit stands securely and check all fasteners are tight. For additional security bolt stands to floor using base mounting holes

Stands are for Gravity Flow or set Parallel and adjust to within operational the height stated, using 4x 60dia knob.

For gravity flow (camber): lock stand upright to using smiley bracket middle & bottom location holes, set infeed height then adjust out-feed height to give desired flow, keeping uprights perpendicular to floor

For horizontal assembly or, if fitted with castors: Lock stand upright using middle & top smiley bracket location holes, keeping uprights perpendicular to floor

